


TRIM INSTALLATION: Lever x Rose or Escutcheon I-M3000 2013 01

M3000 Series Lock
With Rose Trim

1. Remove Face Plate from Lock
2. Position exterior and interior rose assemblies, making sure the spring-loaded spindle engages with the lock
3. Insert and tighten mounting screws securley from the inside
4. Slide Rose Cover over lever, making sure to align notches on cover with the slots (horizontally) in the rose and snap on
5. Position Thumb Turn and secure with screws
6. Place cylinder collar over cylinder and screw into lock body, making sure the keyway is vertical.
7. Tigthen Cylinder set screw from edge of lock
8. Place Face Plate on backplate and secure with two screws
9. Check operation of lock before closing door

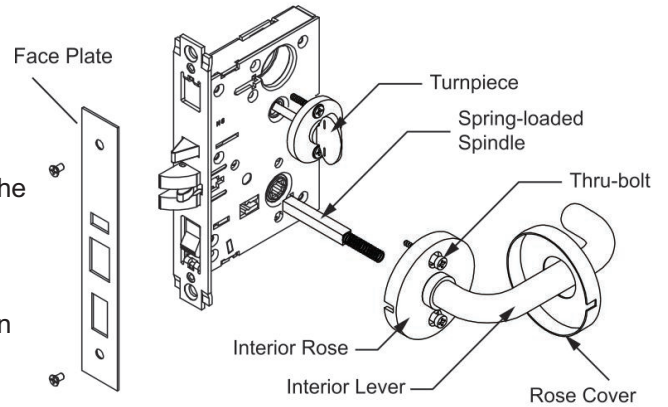

M3000 Series Lock
With Thru Mounted
Escutcheon Trim

1. Remove Face Plate from Lock
2. Position exterior Escutcheon assembly, making sure the spring-loaded spindle engages with the lock
3. Place cylinder collar over cylinder and screw into lock body, making sure the keyway is vertical.
4. Tigthen Cylinder set screw from edge of lock
5. Place Face Plate on backplate and secure with two screws
6. Insert and tighten mounting screws securley from the inside
7. Position Interior Escutcheon assembly with spring loaded spindle engages with the lock.

Note: (If using a function with a thumbtrun, turn must also be engaged with the lock before fastening inside Escutcheon)

8. Insert and tigthen mounting screws securley
9. Check operation of lock before closing door

