
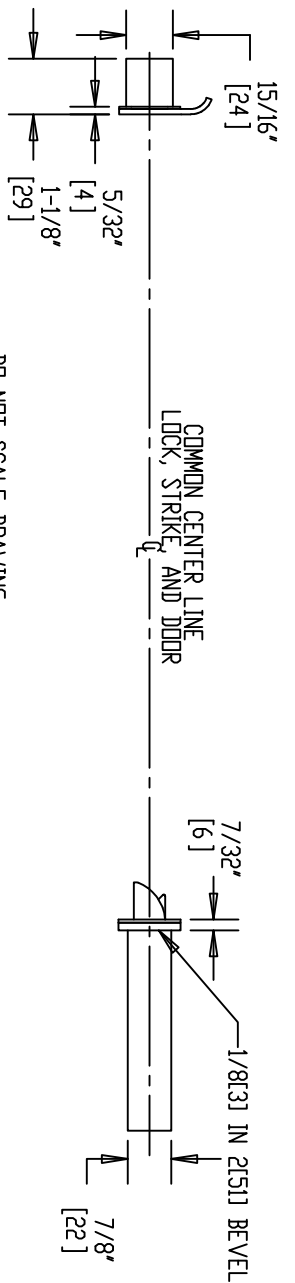


NOTE: 1) DOOR CUT-OUTS AS INDICATED UNDER DOOR DETAIL.
 2) FRAME FOR STRIKE SHOWN UNDER LOCK DETAIL.
 3) TO FIND LOCATION FOR TOP HOLE USE "G" ESCUTCHEON AS GUIDE AFTER LOCK IS INSTALLED

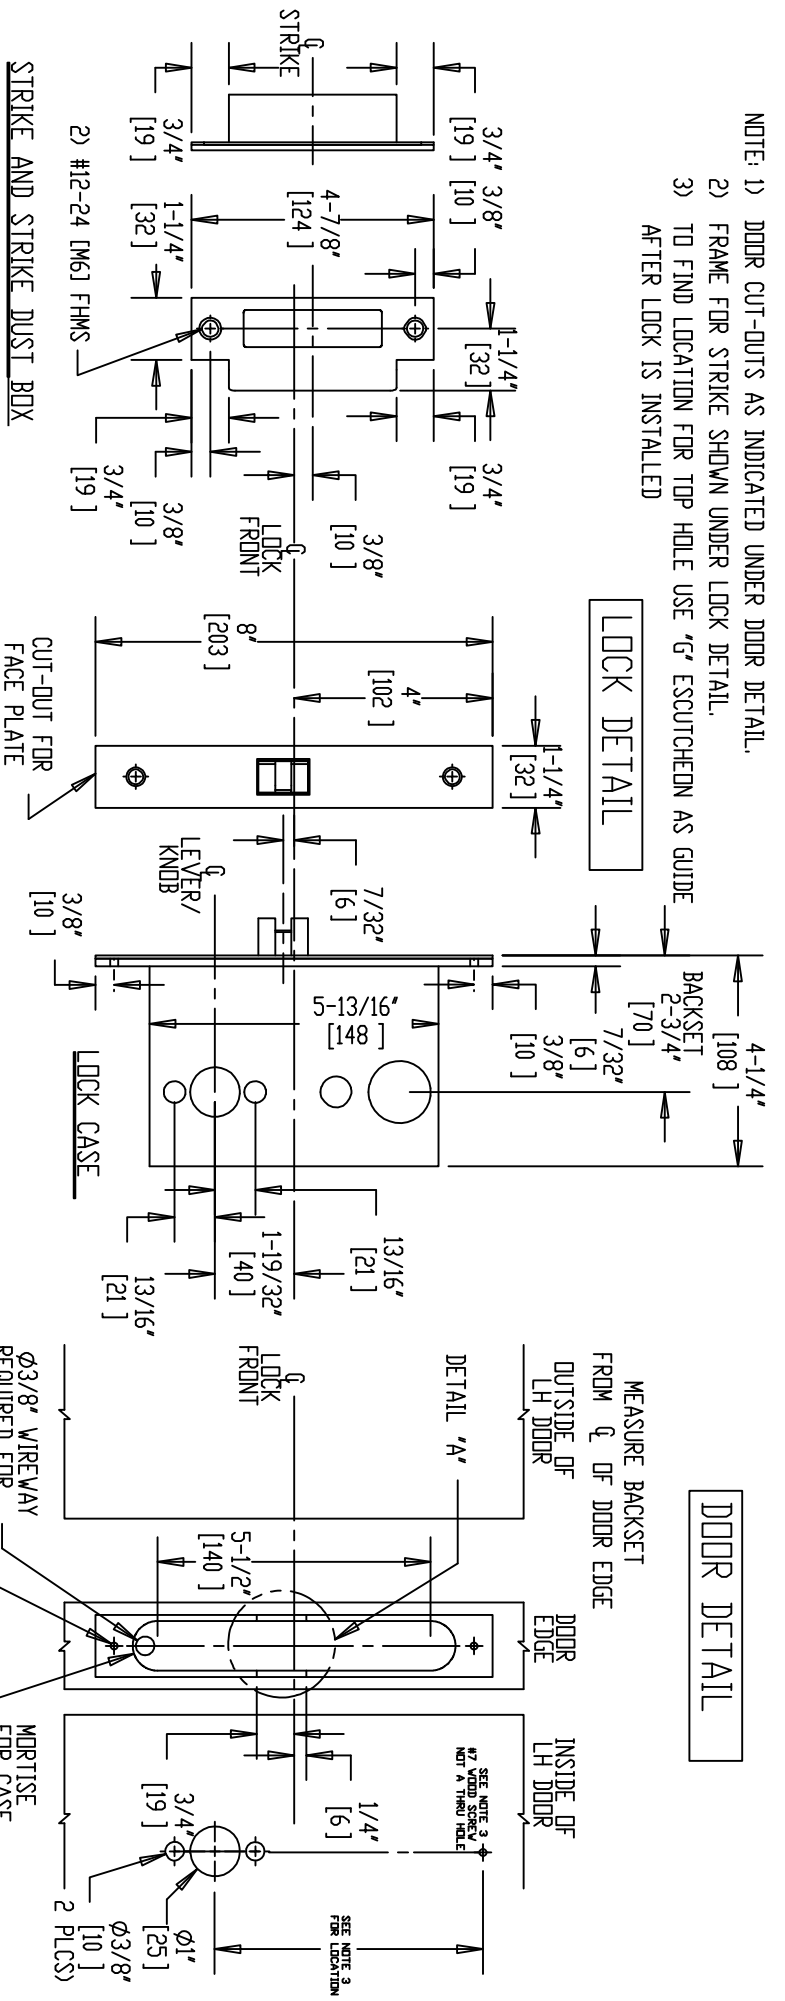


DO NOT SCALE DRAWING.

DOOR DETAIL

MEASURE BACKSET FROM Q OF DOOR EDGE
 OUTSIDE OF LH DOOR
 INSIDE OF LH DOOR

DETAIL 'A'
 DETAIL 'A'
 SEE NOTE 3 FOR LOCATION
 SEE NOTE 3 FOR LOCATION
 MORTISE FOR CASE
 Ø1" DRILL
 4-1/2" DEEP
 Ø3/8" WIREWAY
 REQUIRED FOR
 REX & LBM OPTION
 2) #12 [M6] FHWS

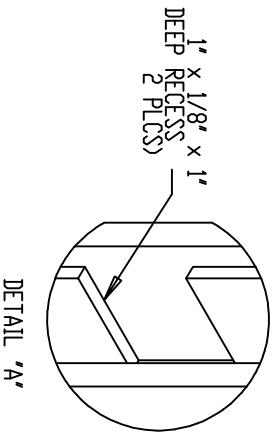

Brookline Industries
 1624 South Clinton Street
 Chicago, IL 60616 USA
<http://brooklineind.com>

M3025 WITH "G" ESCUTCHEON FOR WOOD DOORS

DIMENSIONS ARE INCHES () ARE IN MILLIMETERS.

TEMPLATE NUMBER: **T-M3025GW Rev1**

DATE: 01-01-10