


NOTE: 1) DOOR CUT-DUTS AS INDICATED UNDER DOOR DETAIL.  
 2) FRAME FOR STRIKE SHOWN UNDER LOCK DETAIL.  
 3) TO FIND LOCATION FOR TOP HOLE USE 'G' ESCUTCHEON AS GUIDE AFTER LOCK IS INSTALLED

**LOCK DETAIL**

**DOOR DETAIL**

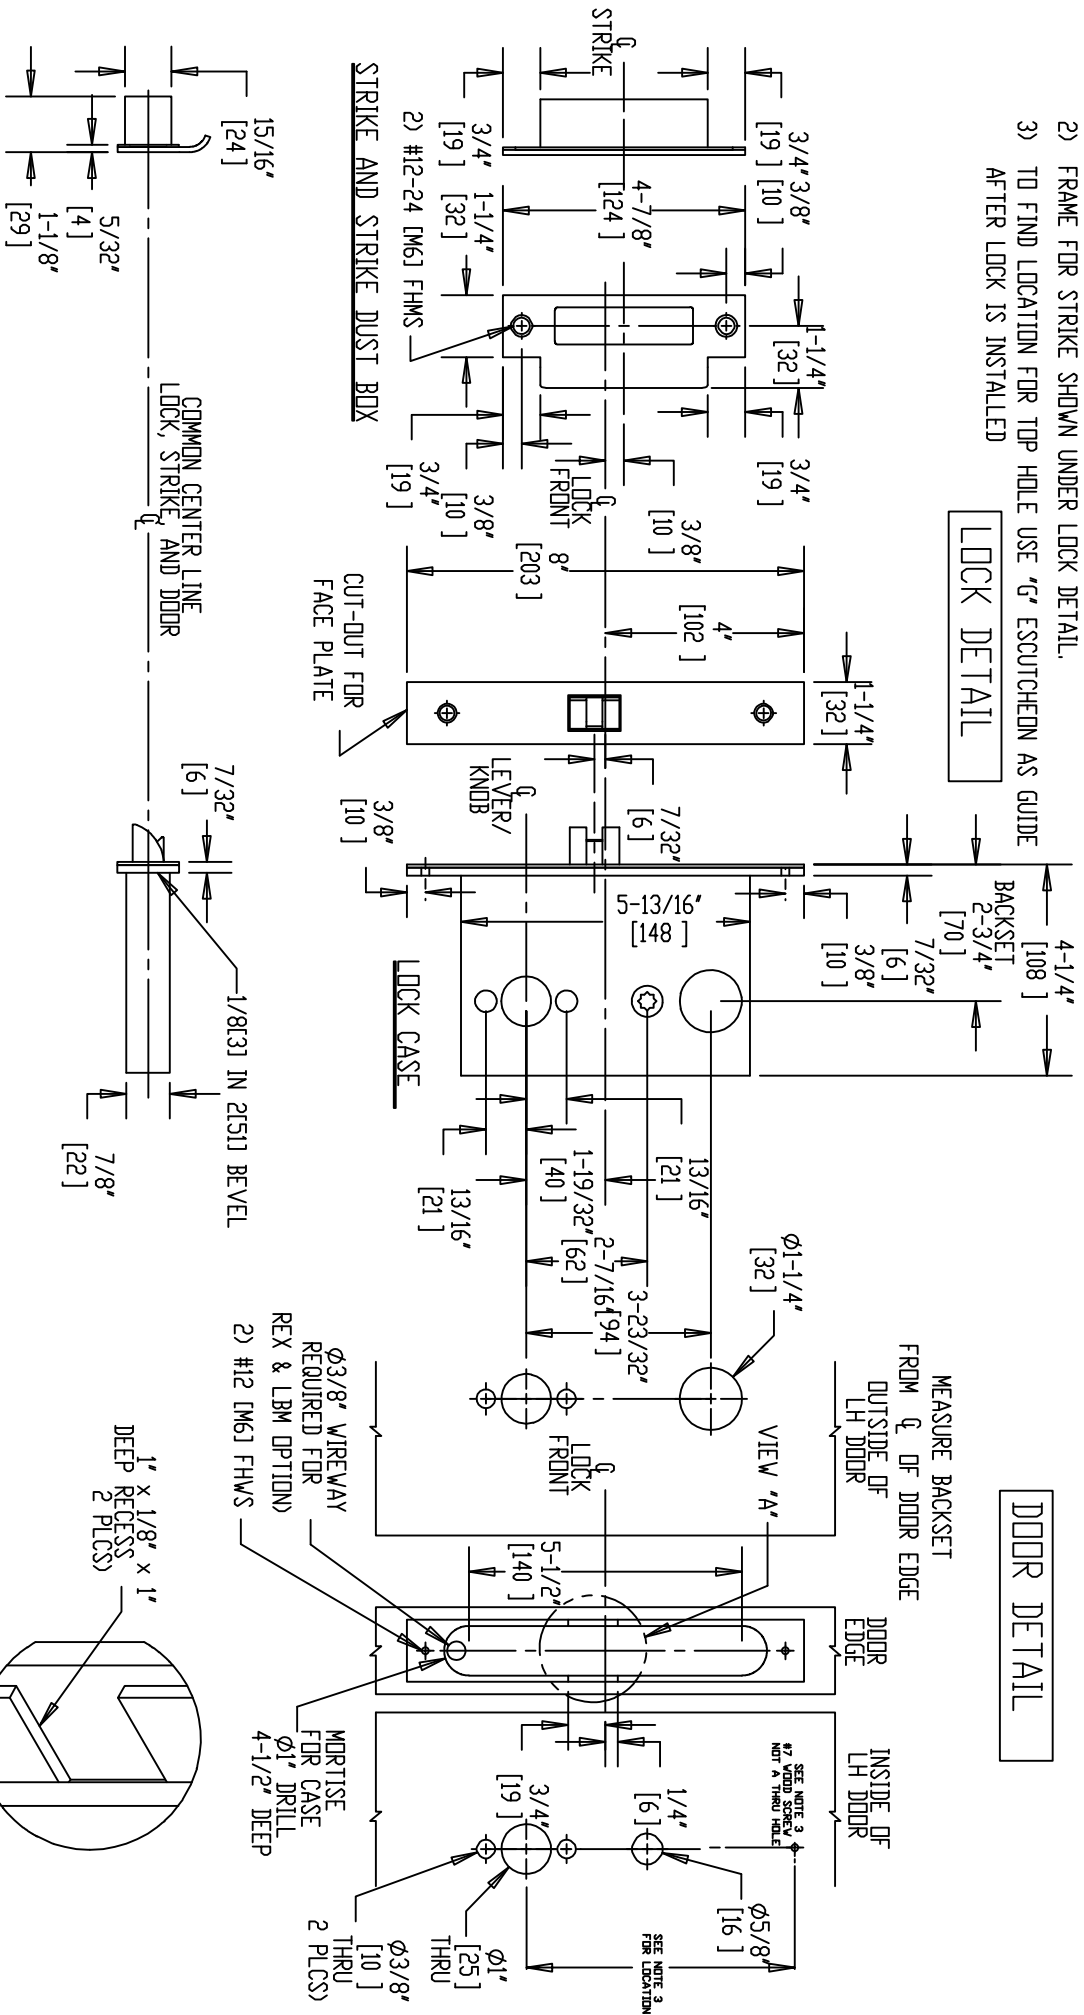

DO NOT SCALE DRAWING.




Brookline Industries  
 1624 South Clinton Street  
 Chicago, IL 60616 USA  
 http://brooklineind.com

DIMENSIONS ARE INCHES ( ) ARE IN MILLIMETERS.

**M3056 WITH "A" or "B" ROSE  
 FOR WOOD DOORS**

TEMPLATE NUMBER: **T-M3056ABW** Rev1

DATE: 01-01-10

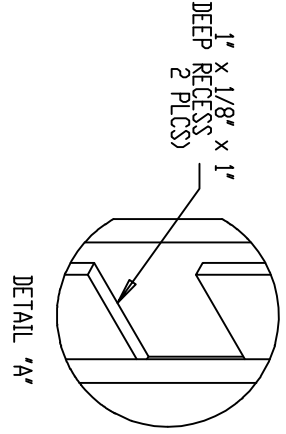

Φ3/8" WIREWAY REQUIRED FOR REX & LBM OPTION)  
 2) #12 (M6) FHWS  
 MORTISE FOR CASE Φ1" DRILL 4-1/2" DEEP  
 SEE NOTE 3 FOR LOCATION